



Instructions for assembly and disassembly of MTG Systems FixMet® teeth


Instructions for assembly

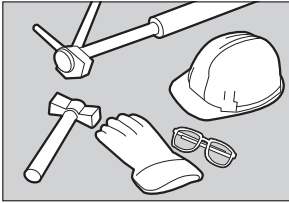


To assemble and disassemble the MTG Systems FixMet® teeth you need a hammer and an extractor. It is recommended to use some safety precautions: helmet, eye-protection, gloves, hammer and metal-protected boots.

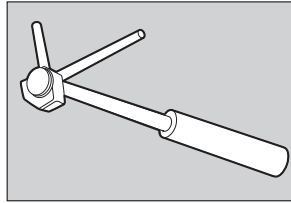


To facilitate the disassembly of the MTG Systems FixMet® teeth a special extraction tool is available. This extractor consists of a handle, a tube and a head. The head contains two ends of different length and a square part.

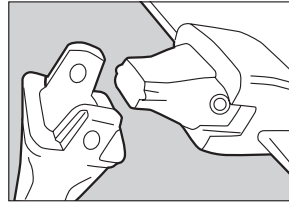


Clean the adapter nose to ensure correct fitting of the tooth.

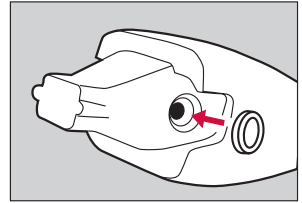


Place the retainer in the hole situated on one side of the adapter nose.

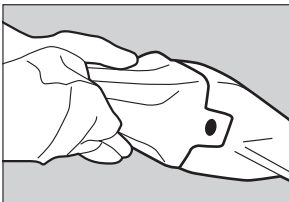

Position the tip on the adapter nose.

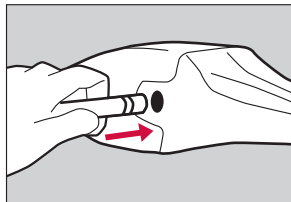


Put the pin into the hole on the opposite side to the retainer, with the tapered end first. The pin enters at an angle, due to the fact that the pin holes of the adapter and the tip are not situated on a straight line. This creates a tightening-effect of the tooth on the adapter.

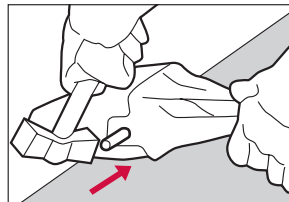


Hit the pin to insert it completely. The end of the pin may not stick out on neither side of the nose.

Instructions for disassembly


The tooth is disassembled by removing the pin. The pin removal must be carried out in the opposite side of its introduction.

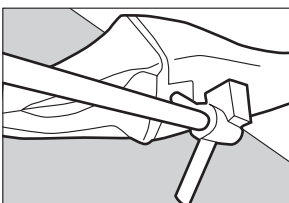


Position the short end of the extractor head against the end of the pin, on the side where the retainer is located.

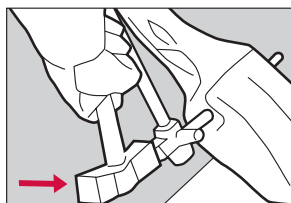

With a hammer hit on the square part until the pin goes through the retainer.

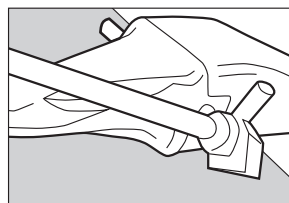

Position the long end of the extractor head into the pin hole.

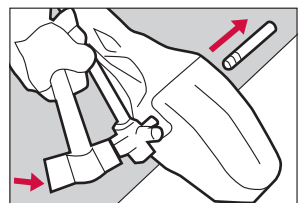

With a hammer hit on the square part until the pin falls out on the other side of the tip.